

---


**Function and Key Operation**

---

**Display**


Confirm your setting.

DEVIATION  
SET REF

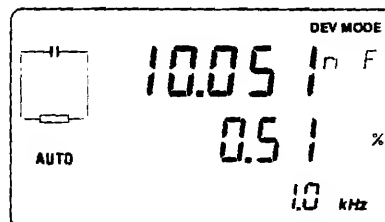

Connect the next component.

The display shows the measured value and the deviation of the previously selected reference in percent.

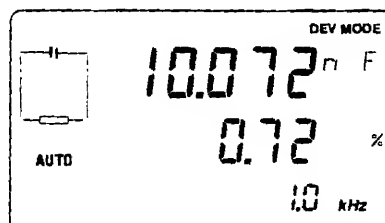

To leave this measuring mode, press the **AUTO** key.

You also can perform relative measurements in the RCL POSITION Mode.

Select the parameter you want to fix in the upper row **at first**;  
then select DEVIATION SET REF.